





MG ZS-EV
5dr SUV
(2022 -)

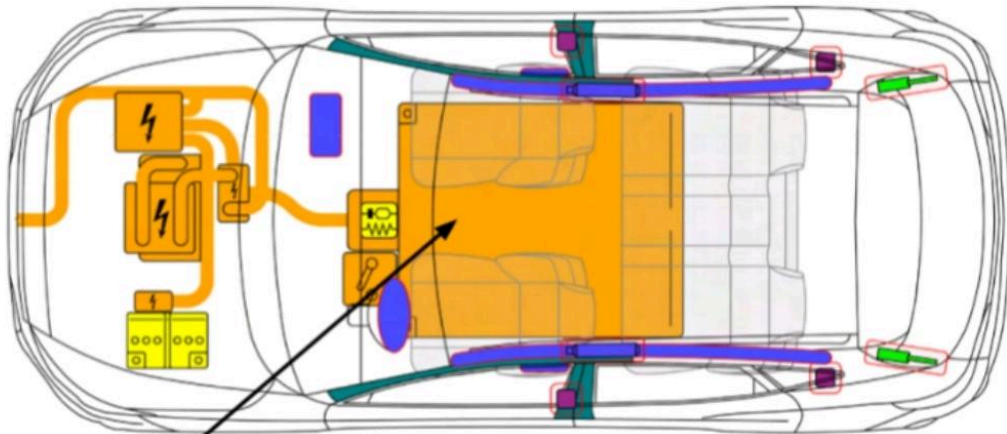

438 V
Li-ion

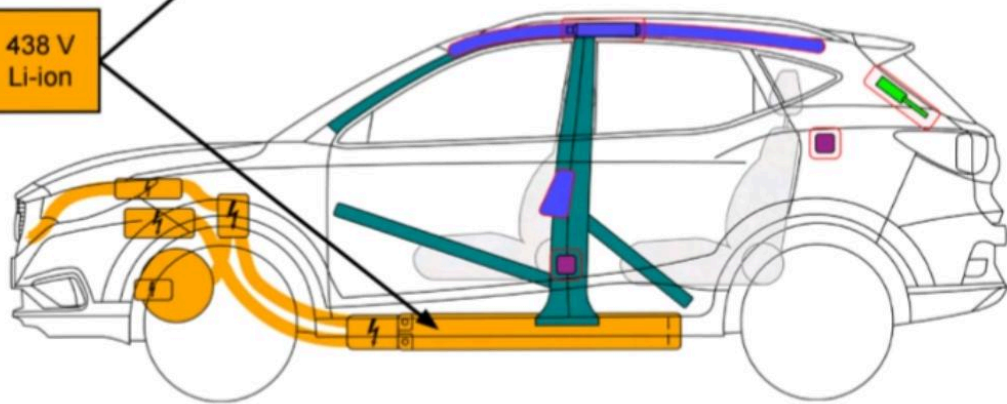

Airbag	Stored gas inflator	Seat belt pretensioner	SRS control unit	Pedestrian protection active system
Battery low voltage	Gas strut/preloaded spring	High strength zone	Zone requiring special attention	High voltage ultra-capacitor
Battery pack, high-voltage	High voltage power cable	High voltage device that disconnects high voltage		

MG ZS EV Type: 5dr SUV (2022 -) – Additional Pages

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN.





2. Immobilization / stabilization / lifting


Immobilize vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position





Lifting points:

-  Appropriate lifting points
-  High voltage battery

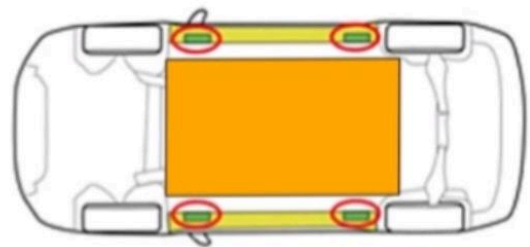


3. Disable direct hazards / Safety regulations

 1. If the “Ready” indicator in the instrument cluster is illuminated press the Start/Stop button once. Then the high voltage system is disabled

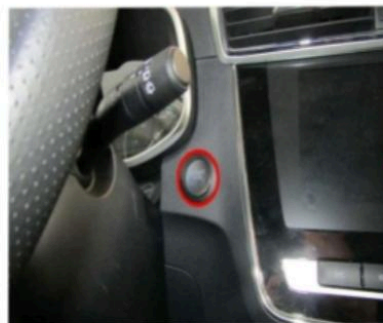


MG ZS EV Type: 5dr SUV (2022 -) – Additional Pages

 2a. Disconnect 12 Volt battery



2b. Deactivation of high voltage system, as alternative of 2a

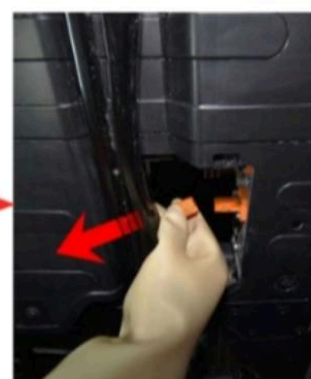



Safety instructions:



Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.

4. Acces to the occupants

 High strength steel in body

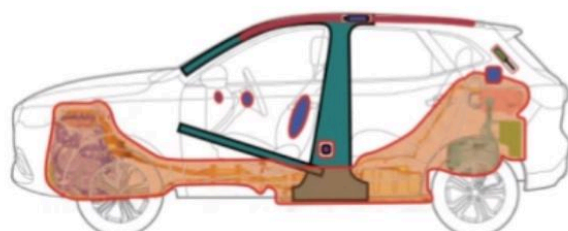


Glass types:

- A. Laminated glass
- B. Tempered glass



MG ZS EV Type: 5dr SUV (2022 -) – Additional Pages

Seat adjustment

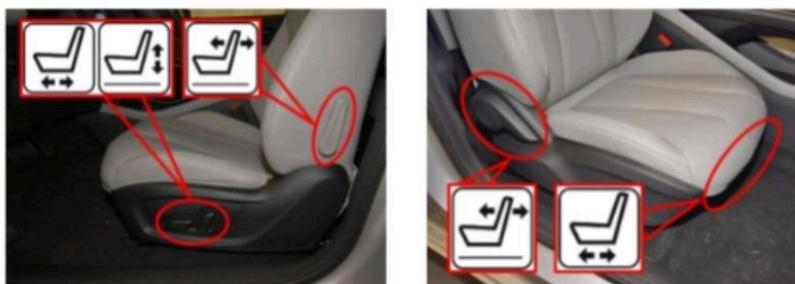

Steering column adjustment



5. Stored energy / Liquids / Gases / Solids

	438V	     
	12V	 
	R-1234yf 395-445 g	   

6. In case of fire



USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.



7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

MG ZS EV Type: 5dr SUV (2022 -) – Additional Pages

8. Towing / transportation / storage

Recovery hook storage



Location rear hook



Location rear hook

 


STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE \geq 5M FROM OTHER AROUND OBJECTS OR VEHICLES!

POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



Towing



10. Explanation of pictograms used

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet
			Boat